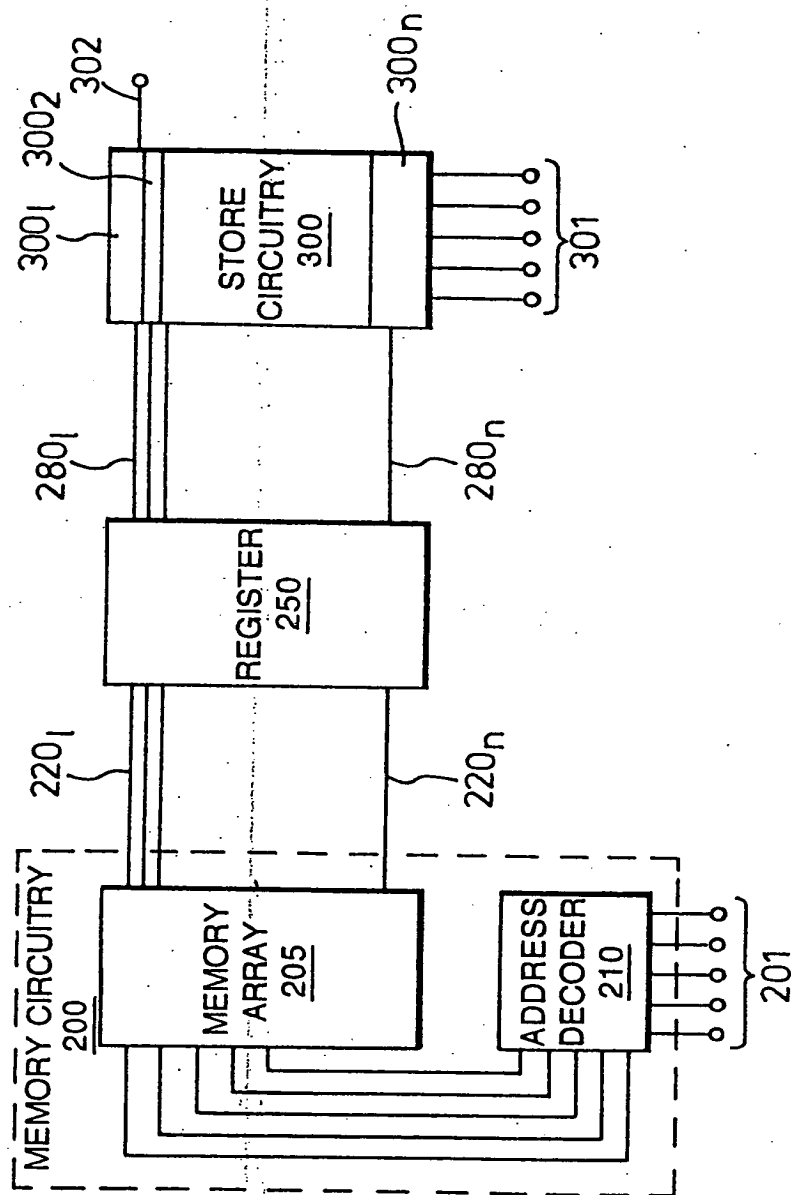


Fig.1.

		WORD ADDRESS	BYTE ADDRESS	INSTRUCTION NUMBER
101	X	0 0 0 0 0	0	
	X	0 0 0 0 1	1	
	X	0 0 0 1 0	2	
	X	0 0 0 1 1	3	
102	X	0 0 1 0 0	4	
	13   cj	0 0 1 0 1	5	
	X	0 0 1 1 0	6	
	0   cj	0 0 1 1 1	7	
103	X	0 1 0 0 0	8	
	13   cj	0 1 0 0 1	9	
	X	0 1 0 1 0	10	
	X	0 1 0 1 1	11	
104	16   j	0 1 1 0 0	12	
	X	0 1 1 0 1	13	
	2   cj	0 1 1 1 0	14	
	X	0 1 1 1 1	15	
105	X	1 0 0 0 0	16	
	X	1 0 0 0 1	17	
	X	1 0 0 1 0	18	
	X	1 0 0 1 1	19	

Fig.2.



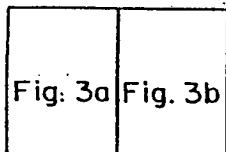


Fig. 3

Fig. 3a

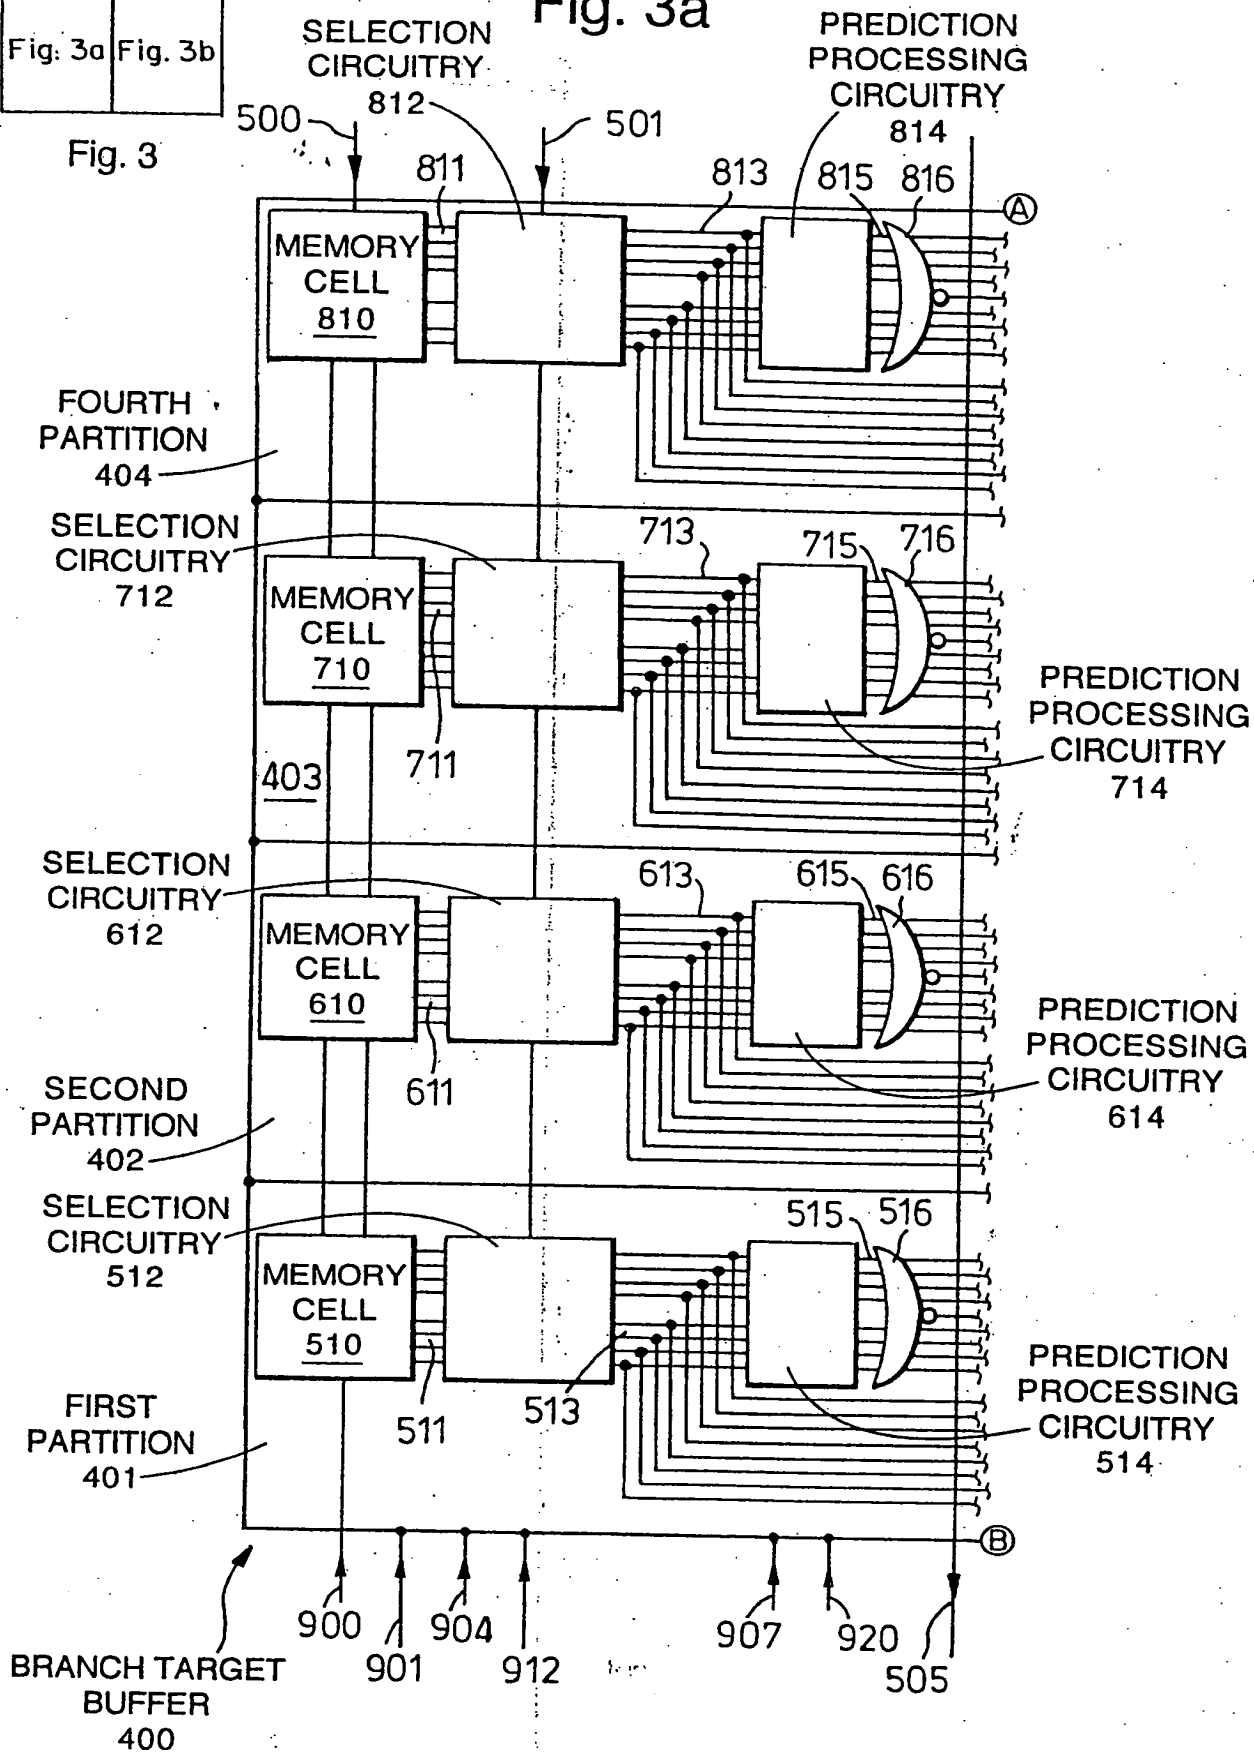


Fig. 3b

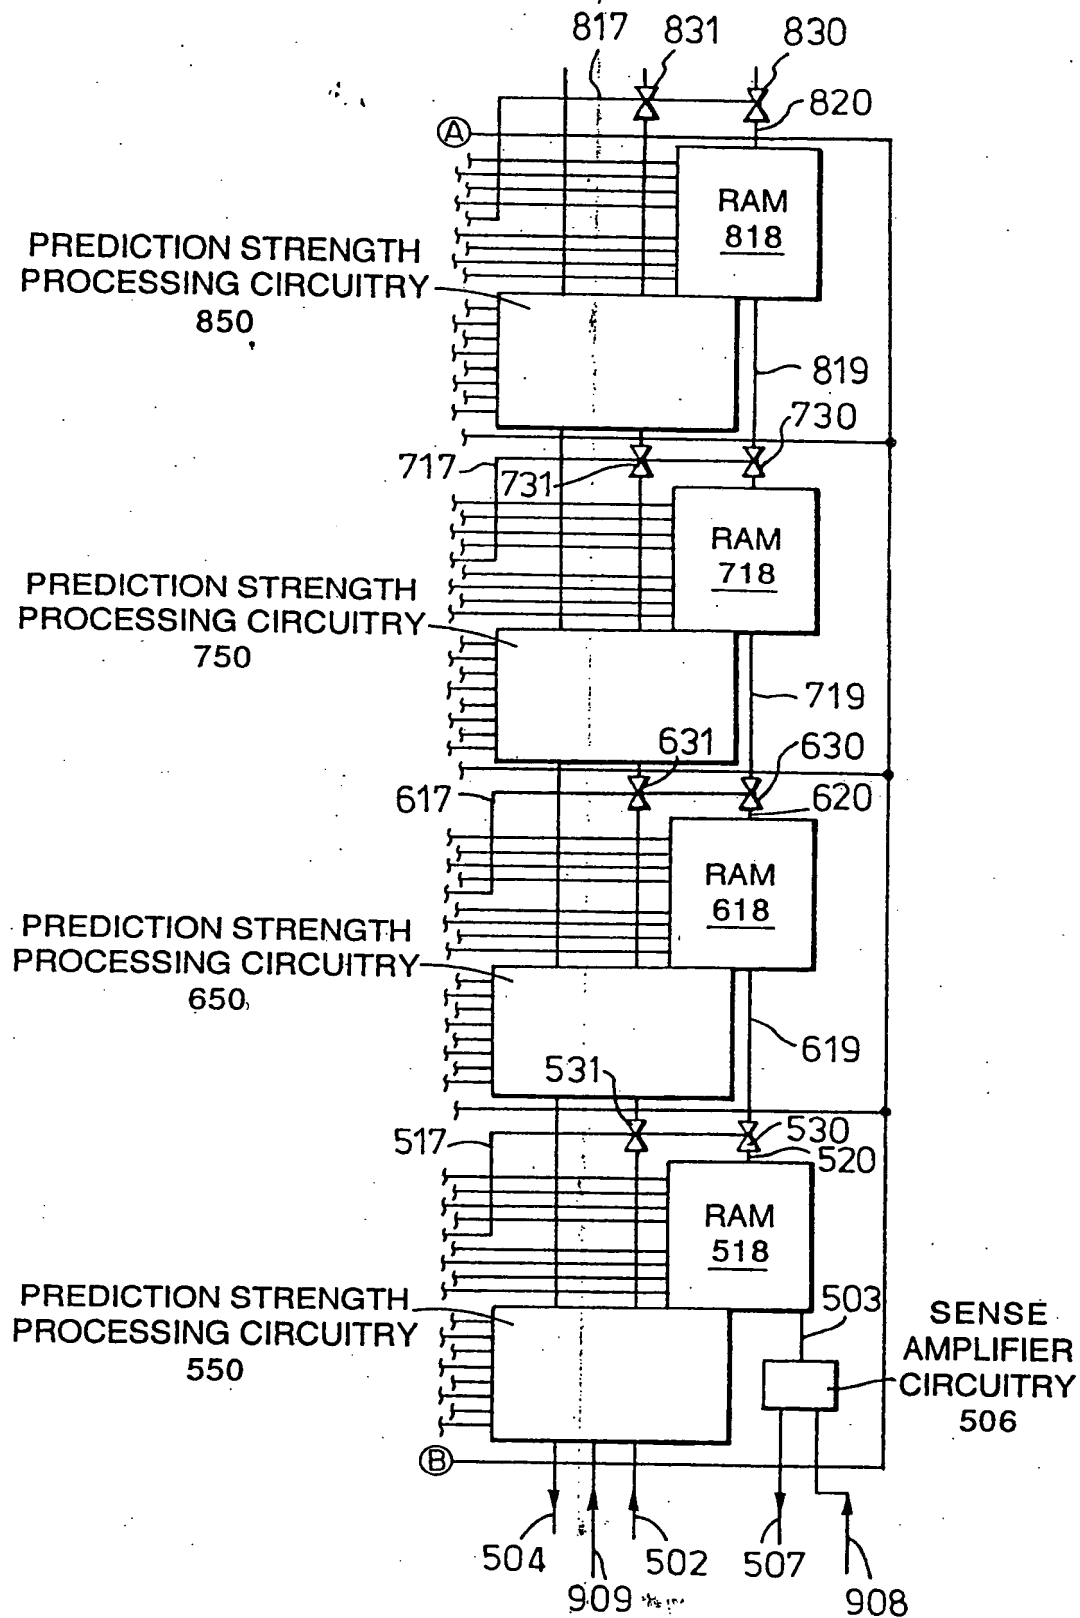


Fig.4.

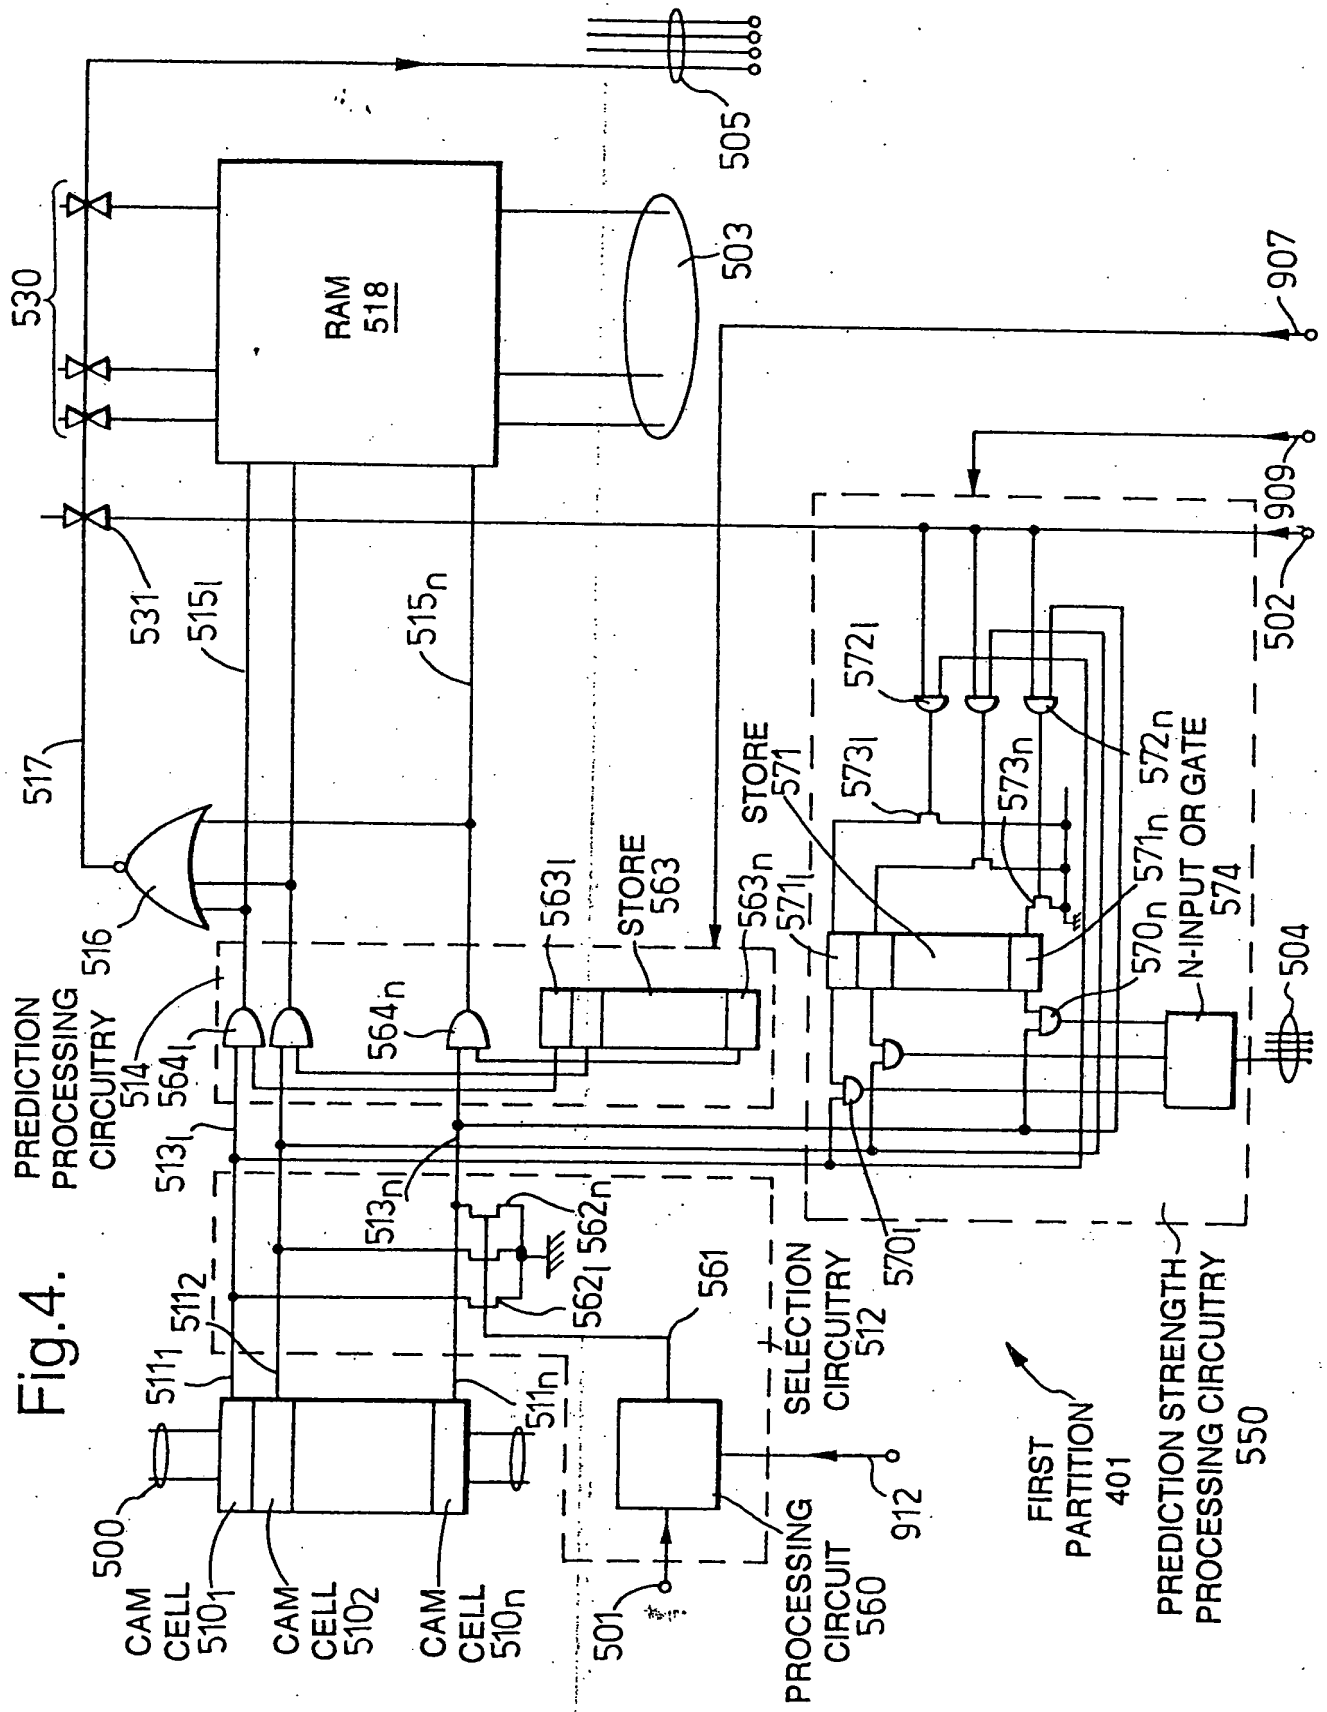


Fig. 5a	Fig. 5b
---------	---------

Fig. 5a

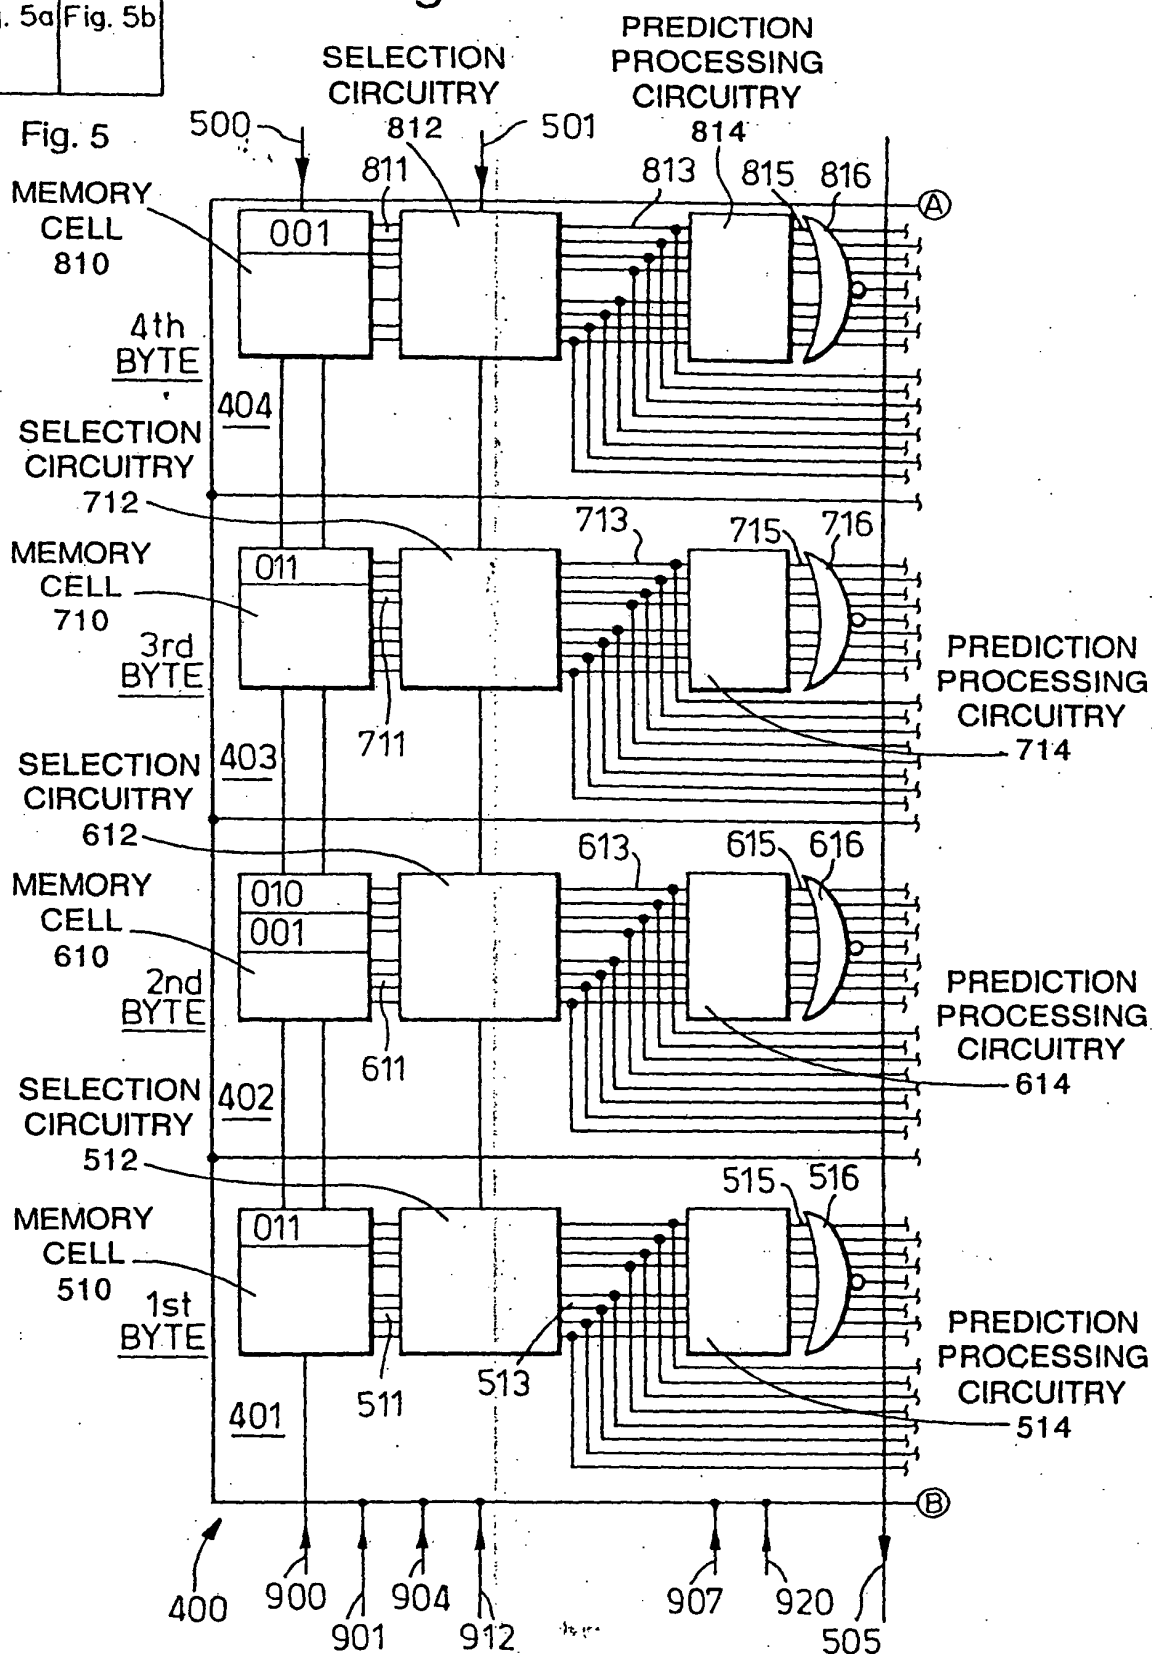


Fig. 5b

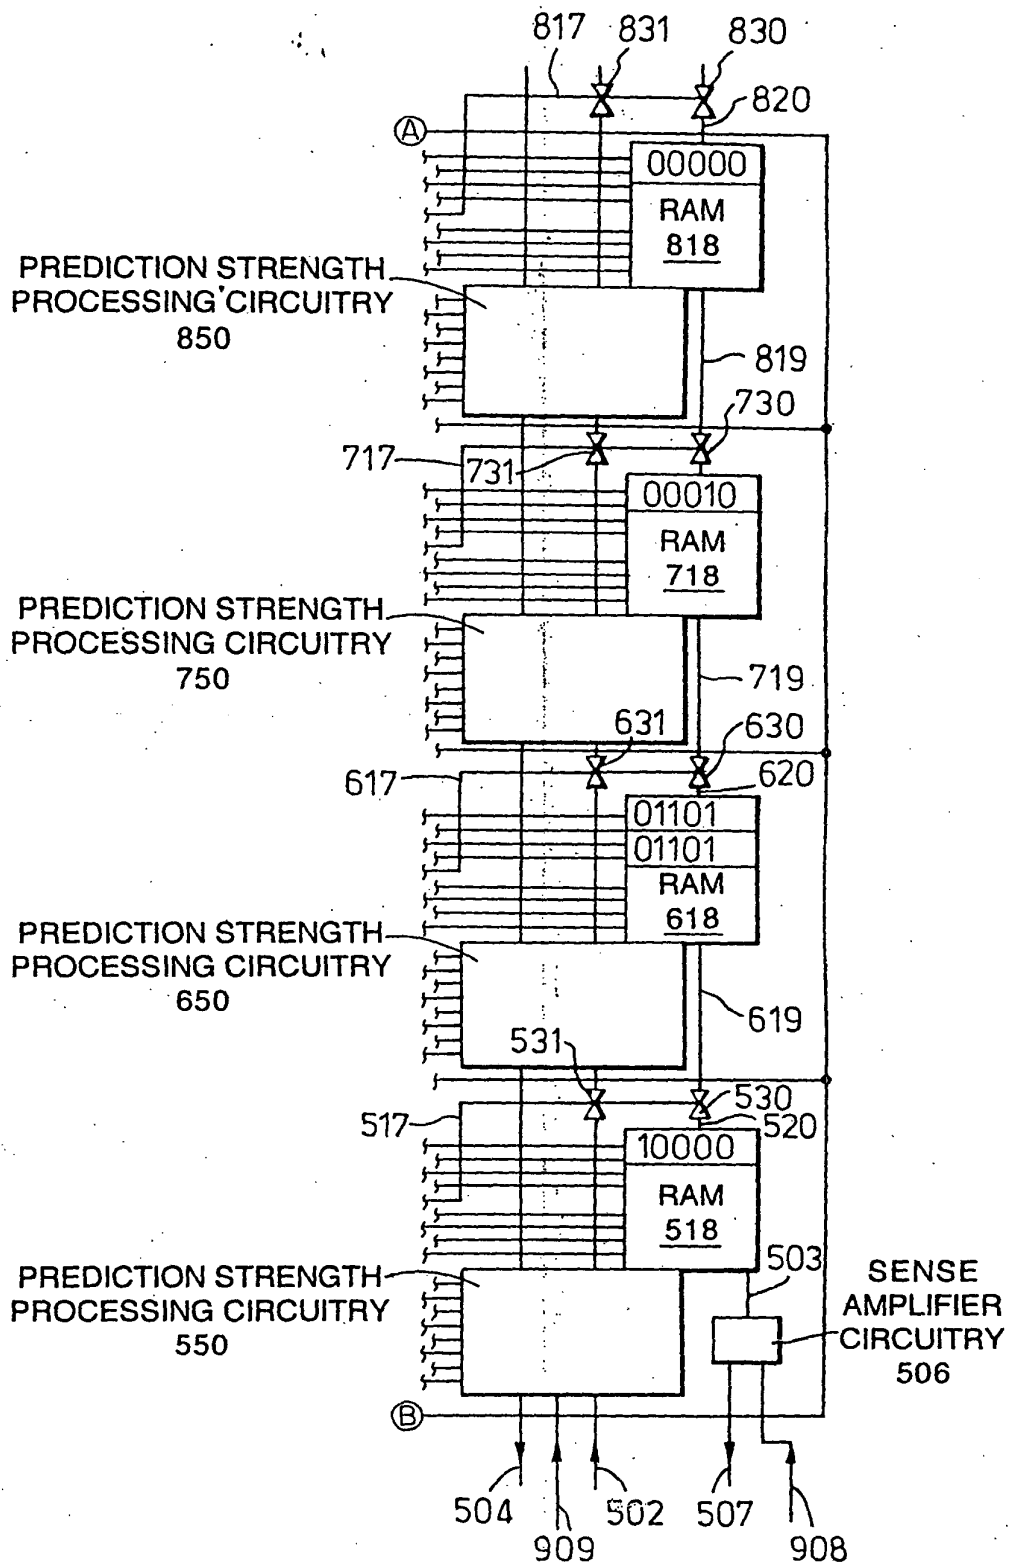


Fig.6.

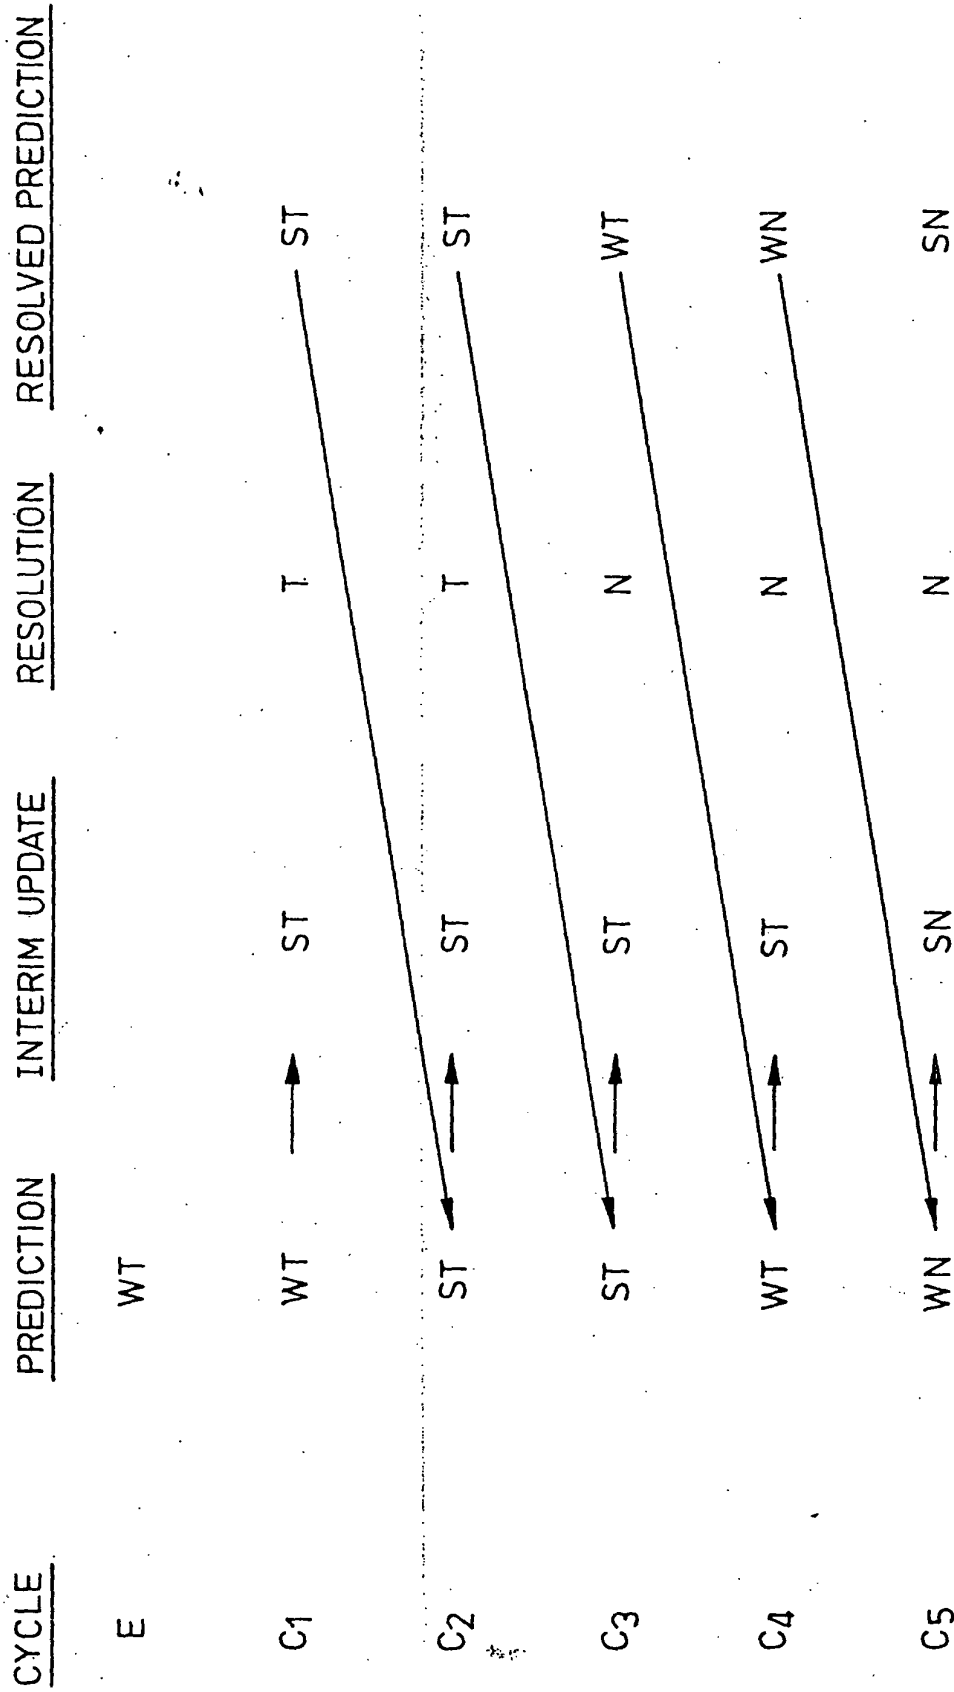




Fig.7.

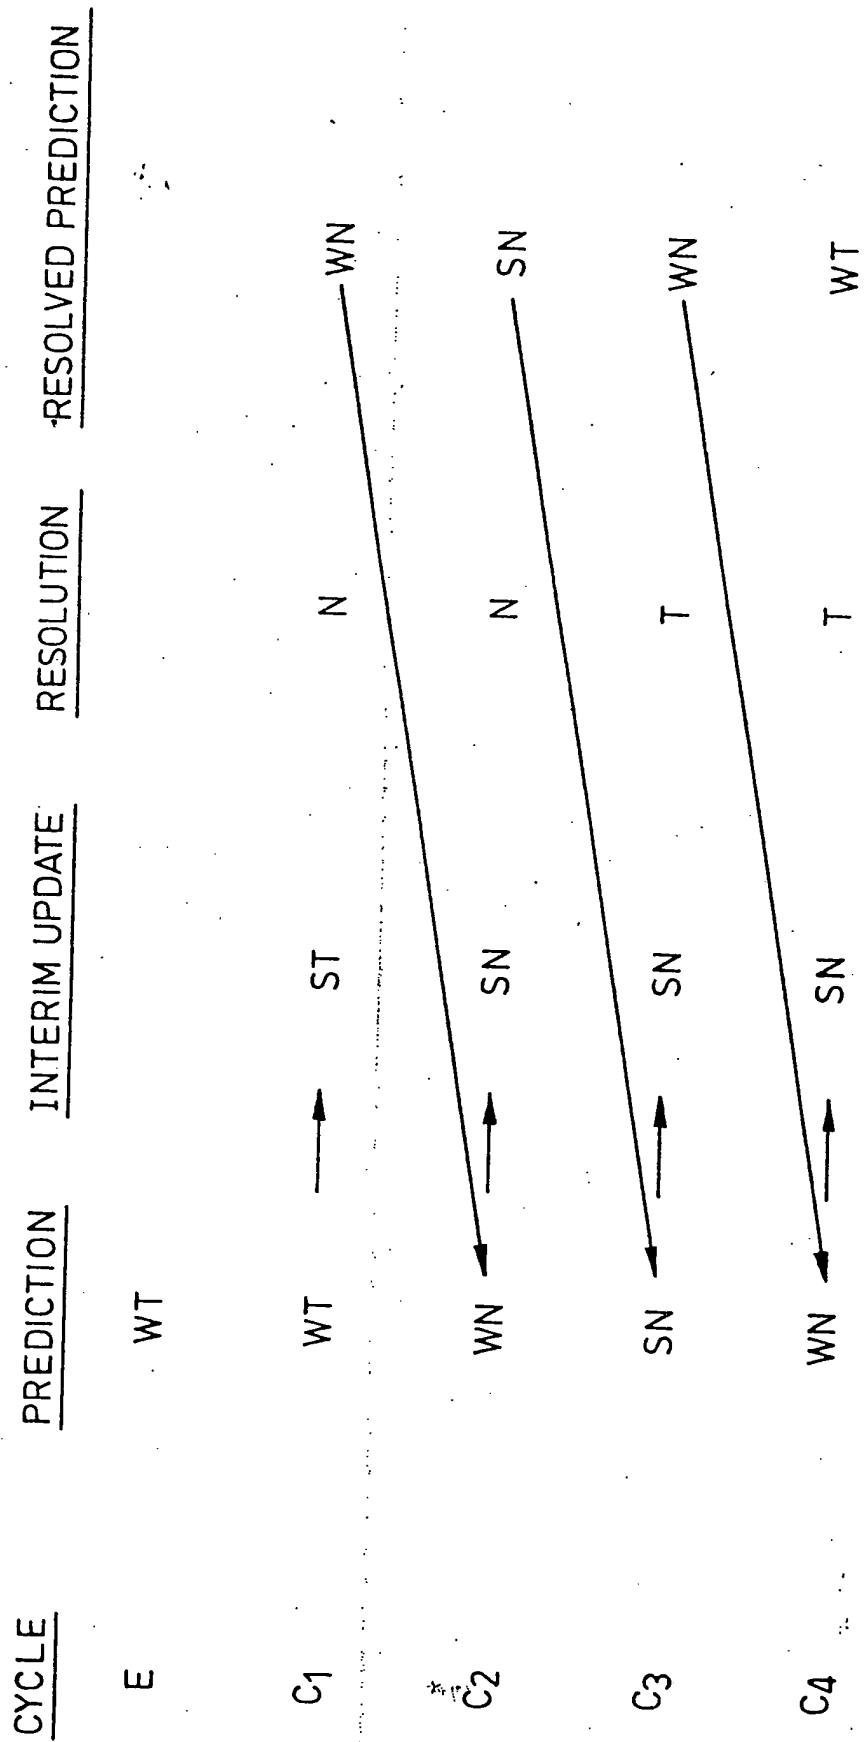


Fig.8.

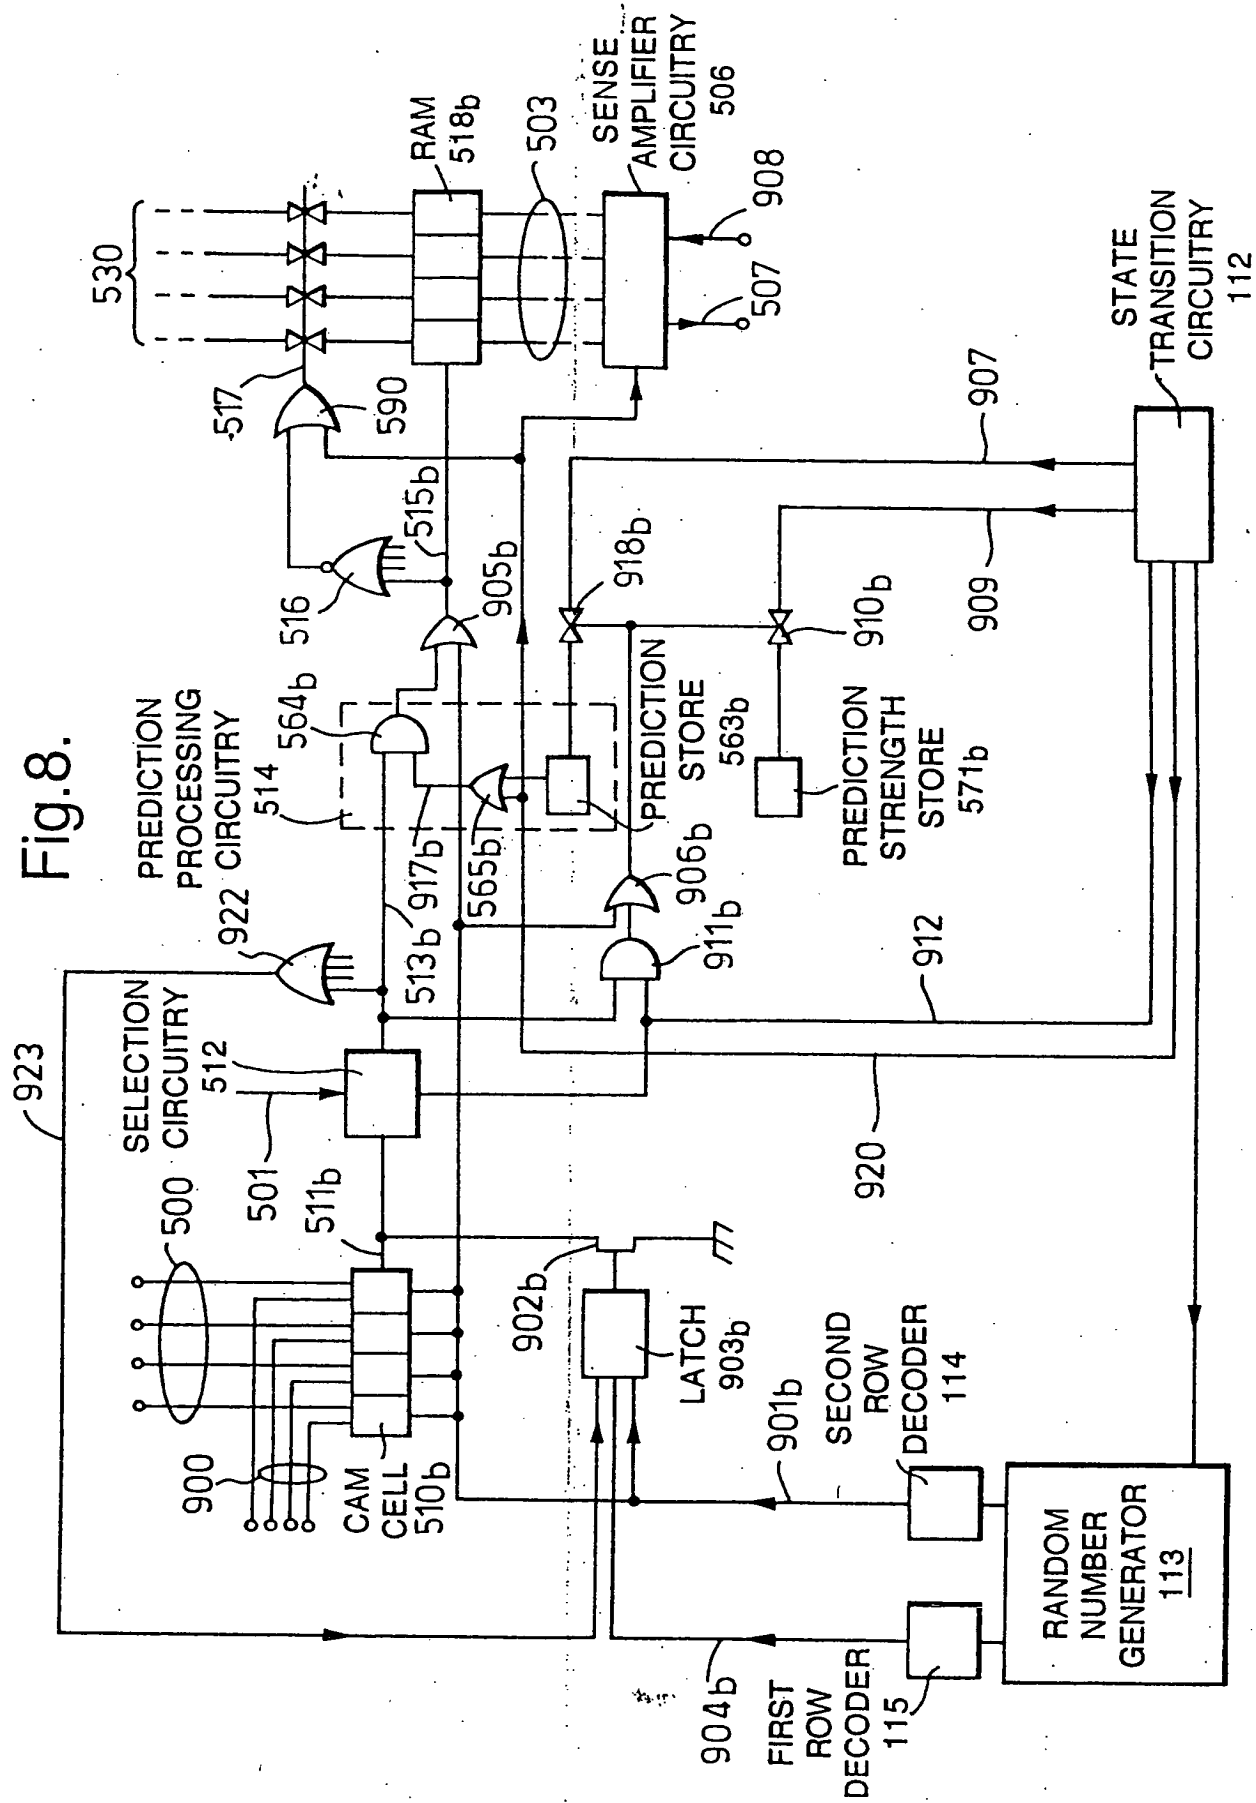


Fig.9.

